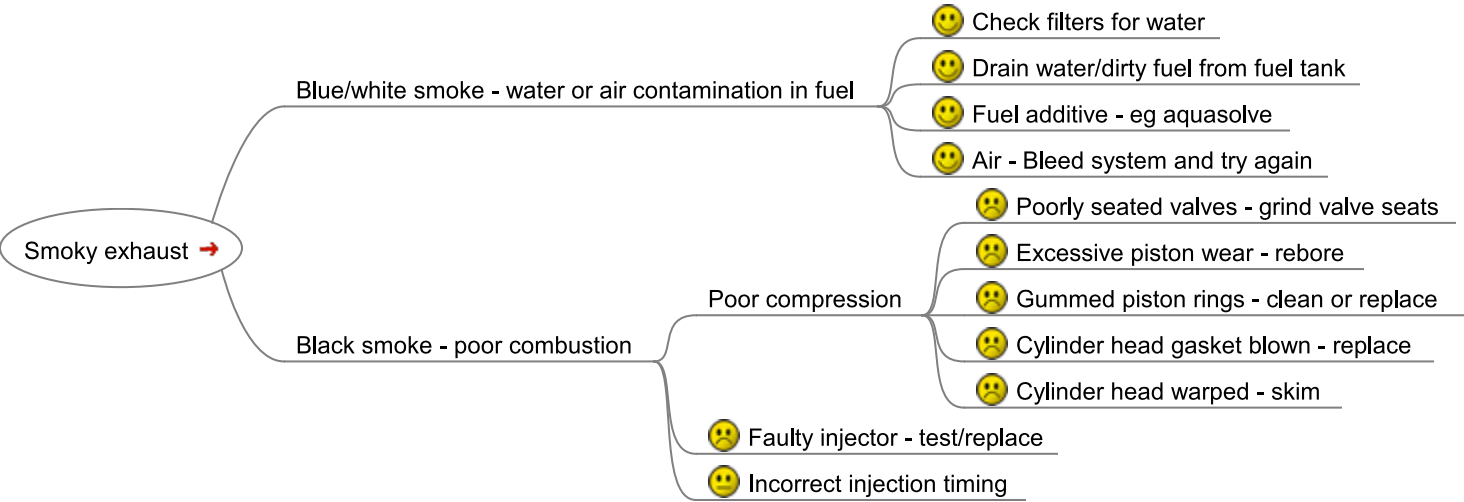
Smoky exhaust
Blue/white smoke - water or air contamination in fuel
Check filters for water
Drain water/dirty fuel from fuel tank
Fuel additive - eg aquasolve
Air - Bleed system and try again
Black smoke - poor combustion
Poor compression
Poorly seated valves - grind valve seats
Excessive piston wear - rebore
Gummed piston rings - clean or replace
Cylinder head gasket blown - replace
Cylinder head warped - skim
Faulty injector - test/replace
Incorrect injection timing